

Adaptation kit Rear outlet

ELS-ARS Ref. no. 08185

The air outlet connections can be placed on the back of the unit for the flush-mounted housings ELS-GU and -GUBA without fire protection encasement. The ARS diverter must simply be mounted on the outlet side in the fan for the correct air flow.

ELS-ARS




Pre-wall adapter

ELS-VA Ref. no. 08189

Allows the front-side insertion and mounting of flush-mounted ELS housings in pre-walls. The adapter is screwed to the housing and its frame with Spax screws or pre-wall screws. Compatible with housing types ELS-GU and ELS-GUBA.

ELS-VA

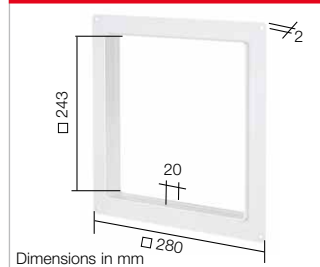

Second room kit

ELS-ZS Ref. no. 08186

Extract air unit for flush-mounted installation for connection to all housings for second room connection ELS-GU. Award-winning design facade in alpine white, with closed front and all-round air inflow. Integrated, easily accessible air filter. Includes second room connectors for fan housings ELS-GU and -GUBA.

ELS-ZS



ELS-VA with housing



WC connection kit

ELS-WCS Ref. no. 08191

Kit for connecting WC extraction in combination with the room ventilation; for housing types ELS-GU, -GUBA. The fan housing and cistern pipe are connected with commercially available HT pipes. Scope of delivery: Connecting panel, 90° angle, 2 stepped connectors Ø 40 and 30 mm.

ELS-WCS



Surface-mounted adapter with side inlet

ELS-APASA Ref. no. 07328

Made of steel sheet in alpine white. Insulated adapter with side inlet for surface mounted installation. Compatible with housing types ELS-GU and ELS-GUBA.

ELS-APASA



Second room connectors

ELS-ZAS Ref. no. 08184

Connectors for housing types ELS-GU and -GUBA. For the connection of second room extraction on site. NW 75/80 mm.

ELS-ZAS




Sunken frame

ELS-VSR Ref. no. 07322

Made of steel sheet in alpine white. Allows flush-mounted wall and ceiling installation of inner facade. Suitable for ELS-GU and ELS-GUBA.

ELS-VSR

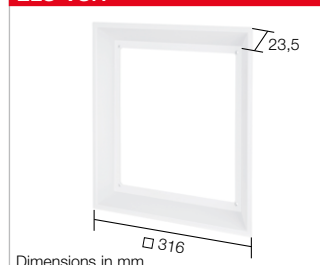

Universal mounting bracket

ELS-MHU Ref. no. 08187

Practical for flush-mounted housing installation in installation shafts, primarily for housings with fire protection encasement. For mounting the housing to the ceiling or wall. Adjustable in height, depth and perpendicular; fits with all flush-mounted housing types.

ELS-MHU



Flush-mounted spacer frame

ELS-UPA Ref. no. 07332

Used when ELS-GU and ELS-GUBA are installed too deep. This closes the gap (max. 50 mm) between the housing and paneling.

ELS-UPA



Mounting bracket

ELS-MB Ref. no. 08188

For mounting flush-mounted housings in pre-wall systems in connection with elements from the pre-wall supplier.

The mounting bracket is easily mounted to the back of the ELS housing using hexagon-head and square-head screws in the anti-rotation grooves.

ELS-MB



Space frame

ELS-AGR Ref. no. 08193

Covers up to 15 mm of protruding flush-mounted housing, which has not been installed flush with the plaster or tiles. The spacer frame is simply fixed between the wall/ceiling and ELS inner facade.

ELS-AGR

